




Directions:

1. Place tortillas into the Perfect Tortilla™ pans, gently pressing into the bottom and sides.
2. Bake tortillas according to the recommended cooking times below, until shells are crisp and lightly browned on the edges. Remove to a cooling rack and let sit for 5 minutes. Then, carefully remove tortilla bowls from Perfect Tortilla™ pans. Keep warm, or cool completely until ready to serve.
3. Tortilla bowls can be stored in an airtight container for up to one week.
4. To re-heat, bake in a pre-heated 325°F oven for 3-5 minutes, until warm.

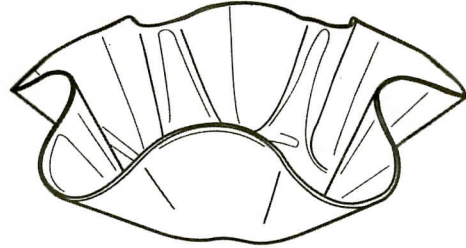

Perfect Tortilla™ Pan

Tortilla Size (Flour, Grain & Flavored Tortillas)	Recommended Cooking Temperature	Recommended Cooking Time
6.5" - 8"	400°	5 - 7 Minutes
<i>*For extra crispy</i>	400°	7 - 10 Minutes
10"	400°	7 - 10 Minutes
<i>*For extra crispy</i>	400°	10 - 12 Minutes
<i>*For all - let cool for approximately 5 minutes in the pan after removing from oven.</i>		

Note: Cooking times may vary depending on your appliance.

IMPORTANT

Do Not Use The Perfect Tortilla™ Pan Set Before Reading the Following:

1. Read everything contained in this manual.
2. When using the pans, handle all hot surfaces with dry cooking mitts or potholders (wet cooking mitts may produce steam and cause serious burns).
3. Do not expose Perfect Tortilla™ pans to temperatures that exceed 400°F.
4. If any part of the Perfect Tortilla™ pans appear to be damaged or malfunctioning, discontinue use immediately.
5. When using the pans, do not use kitchen utensils that may cause personal injury or damage to the surface of the system.
6. Do not allow children to use this product without supervision.
7. When handling the pans, take all necessary precautions to avoid burns, cuts or serious personal injury.
8. NEVER use the Perfect Tortilla™ pans in a microwave oven, broiler in oven or on a stovetop.
9. Do not clean the pans until they have cooled completely.

CAUTION:

DO NOT LEAVE UNATTENDED OR ALLOW CHILDREN TO USE THIS PAN SET WITHOUT ADULT SUPERVISION.

CARE and HANDLING:

Prior to the first use, wash pans in hot, soapy water. Rinse thoroughly and dry with a soft cloth. The Perfect Tortilla™ Pan Set is now ready for use. When using the pans, only use plastic, wooden or silicone kitchen utensils to avoid scratching the nonstick surfaces. Do not use abrasive cleaning solutions or pads. Dishwasher safe.